INTEX® OWNER'S MANUAL

QuickFill™ Electric Air Pump

Model AP644 220 - 240Volt ~ 50Hz 200W


READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

A WARNING

- Adult use only.
- Do not drop unit into water or expose unit to rain or water.
- Do not direct air stream at face or body.
- Do not operate for more than 10 minutes at a time. Unplug and let cool at least 10 minutes.
- Unplug unit when not in use.
- Do not obstruct vent holes or open source.
- Do not insert objects into the inflation or deflation connector.
- If the AC supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.
- To reduce the risk of electric shock, do not expose to rain. Store indoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

NAMES OF PARTS

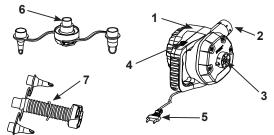

PARTS DESCRIPTION:

- 1 PLIM
 - INFLATION CONNECTOR
- 3. DEFLATION CONNECTOR
- 4 SWITCH
- 5. AC LINE CORD
- 6. NOZZLES
- AIR HOSE

NOTE: Drawings for illustration purpose only. Actual product may vary. Not to scale.

SAVE THESE INSTRUCTIONS

Page 1 167-*IO-R0-2406

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

INSTRUCTIONS


GENERAL

- Return pump, hose and nozzles to package when not in use.
- No specific air pump maintenance is required.

- 1. Attach nozzle or air hose to the inflation connector if necessary and hold pump against inflation valve on item to be
 - NOTE: On large items like inflatable boats and large air mattresses, the pump will fit directly into the inflation valves and provide faster inflation times. Use the appropriate nozzle on small inflation valves as on small air mattresses, etc.
- 2. Plug in the AC line cord into an AC electrical outlet. See Fig (2).
- 3. SWITCH ON: Press "I"; SWITCH OFF: Press "0". See Fig (3).

DEFLATION

- 1. Attach nozzle or air hose to the deflation connector if necessary and hold pump against inflation valve on item to be deflated. See Fig (4).
- NOTE: On large items like inflatable boats and large air mattresses, the pump will fit directly into the inflation valves and provide faster deflation times. Use the appropriate nozzle on small inflation valves as on small air mattresses, etc. 2. Plug in the AC line cord into an AC electrical outlet. See Fig (2).
- 3. SWITCH ON: Press "I"; SWITCH OFF: Press "0". See Fig (3).

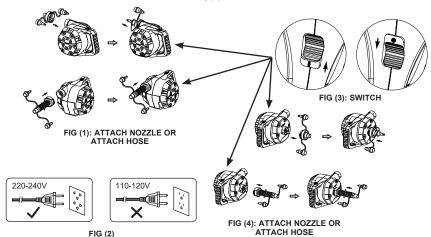

©2023 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos

reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.

© 11 Trademarks used in some counties of the world under license front@ 11 Marques utilisées dans certains pays sous licence de/Marcas registradas utilizades na ligunos paises del mundo bajo licencia de/Watenzasten evervendet in einigen Lânder der Welt in Lizenz von/Intex Marketing Ltd. to/ala/ INTEX

But these determinations of the North Control of the North Contro



SAVE THESE INSTRUCTIONS