




Release air from the filter pump

If there is a lot of air in the filter pump, the flow will be reduced and the pump will make a rattling noise. To make the pump work properly again, the air must be released properly. To release the air from the pump we would ask you to follow the step-by-step plan below:

- Step 1:** Switch off the pump
- Step 2:** Turn the air release valve on top of the housing lid clockwise to open (figure 1)
- Step 3:** Air should now escape from the valve
- Step 4:** As soon as water comes out of the air release valve, you can close it by turning it anti-clockwise (picture 2 and 3)
- Step 5:** The pump has now been properly released of air and can be switched on again

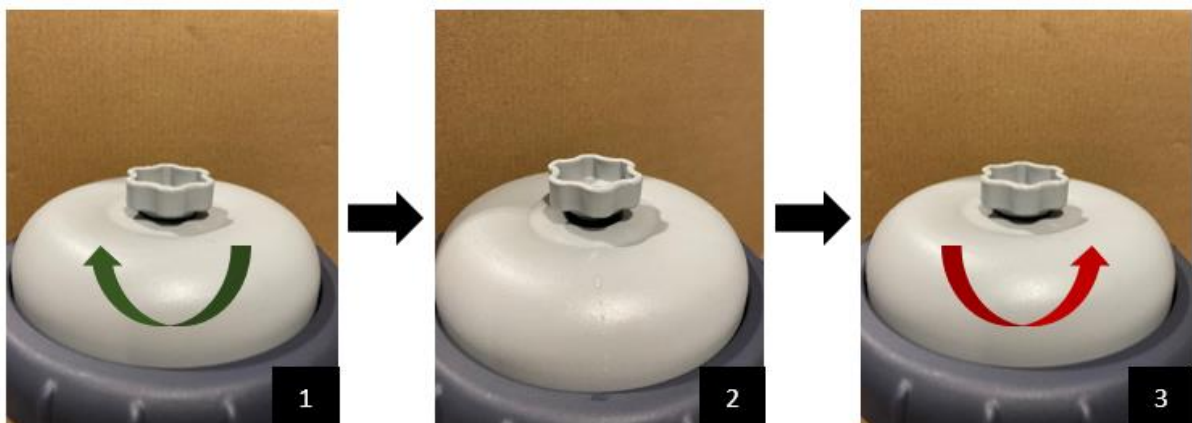

If the problem persists, please [contact local service centre for further assistance](#).